


INDIAN FTR 1200 / S '19-

M O U N T I N G I N S T R U C T I O N S

REF 22348

WINDSHIELD NAKED NEW GENERATION SPORT



ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Sport	Sport screen	1	11053W/H/N/FM3
2		Soporte izquierdo	Left support	1	SOPOR2P3-L22348
3		Soporte derecho	Right support	1	SOPOR2P3-R22348
4		Tornillo allen DIN912 M8X55	M8X55 DIN912 allen screw	2	TORNI-D912--631
5		Casquillo Ø 8,5x Ø 13x 12	Ø8,5 x Ø13 x12 spacer	2	CASQUI-M----769
6		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	4	ARAND-EPDM--722
7		Arandela nylon M5	M5 nylon washer	4	ARNV00000000245
8		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	4	TORNI-AI----520
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85


INDIAN FTR 1200 / S '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1

DISASSEMBLY
DESMONTAJE


DISASSEMBLY ONLY NECESSARY WITH
MOTORBIKE WITH OEM SCREEN

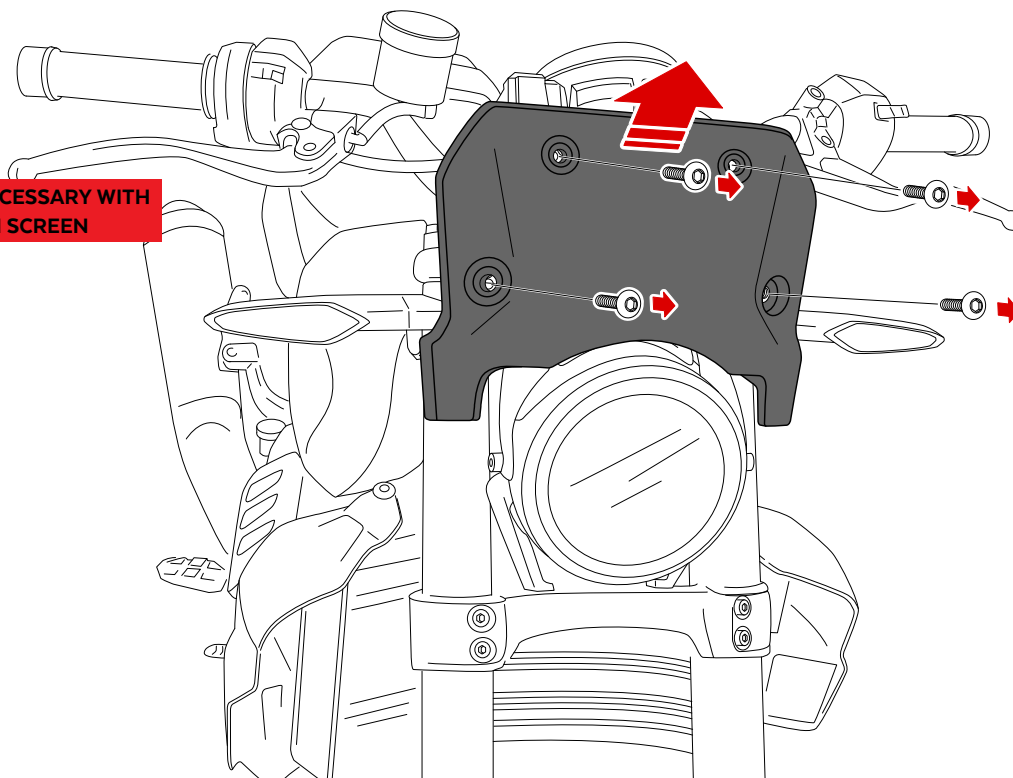

2

DISASSEMBLY
DESMONTAJE

DISASSEMBLY ONLY NECESSARY WITH
MOTORBIKE WITH OEM SCREEN

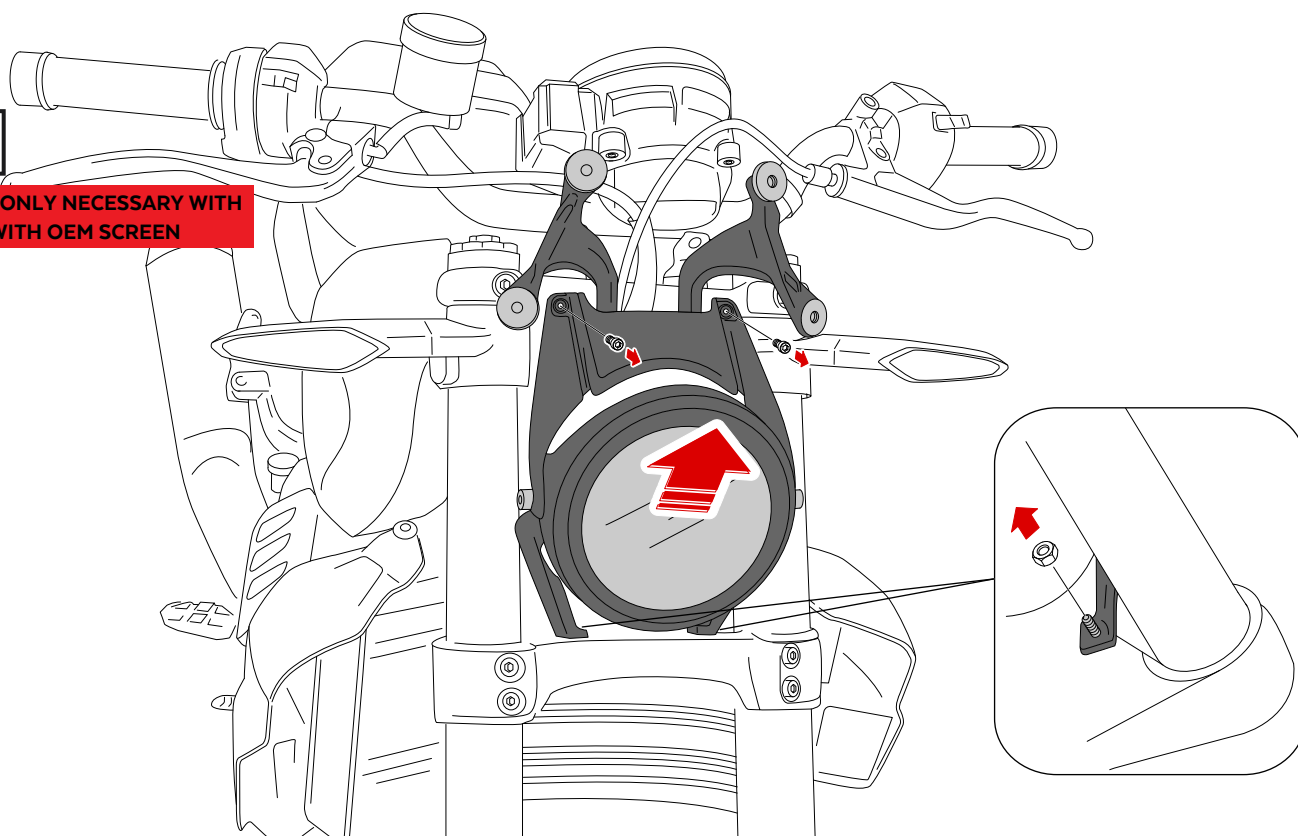


INDIAN FTR 1200 / S '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

3

DISASSEMBLY
DESMONTAJE

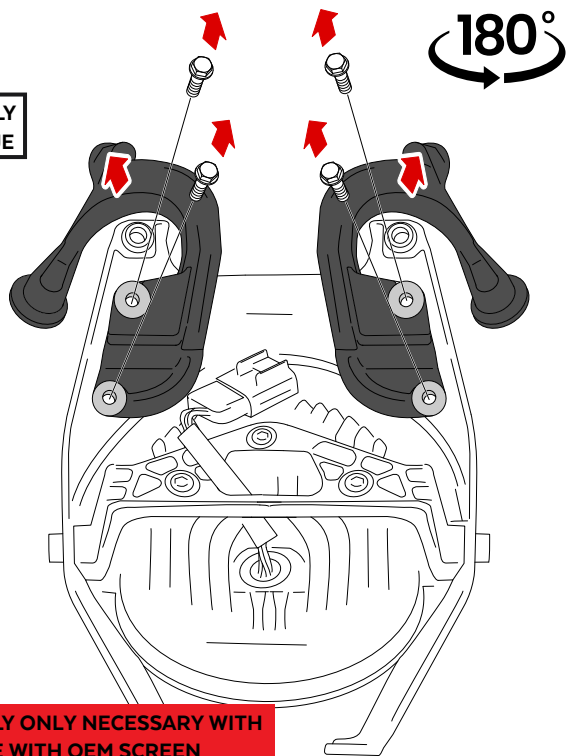


DISASSEMBLY ONLY NECESSARY WITH
MOTORBIKE WITH OEM SCREEN

DISASSEMBLY ONLY NECESSARY WITH
MOTORBIKE WITH OEM SCREEN

4


ASSEMBLY
MONTAJE

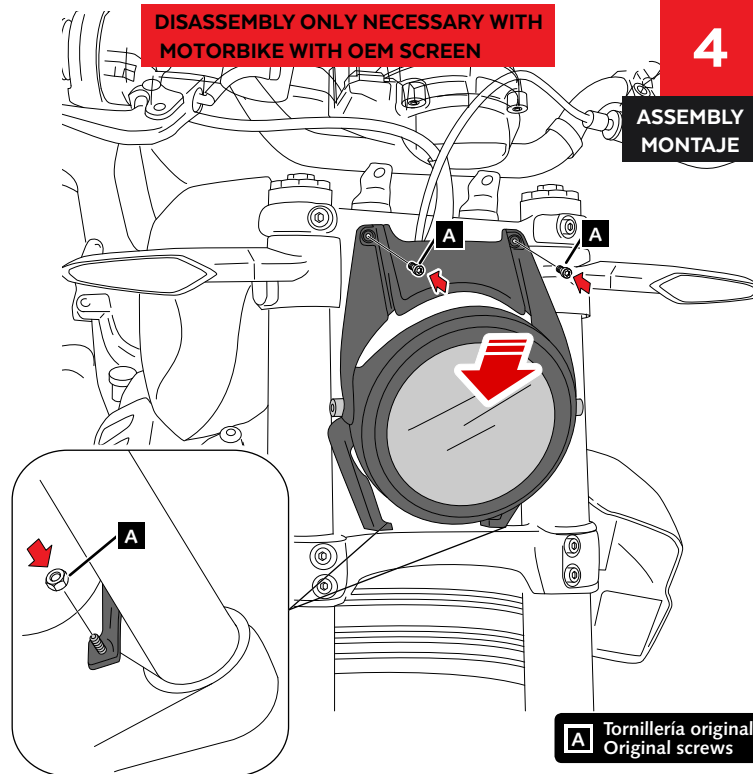

A Tornillería original
Original screws

5

DISASSEMBLY
DESMONTAJE

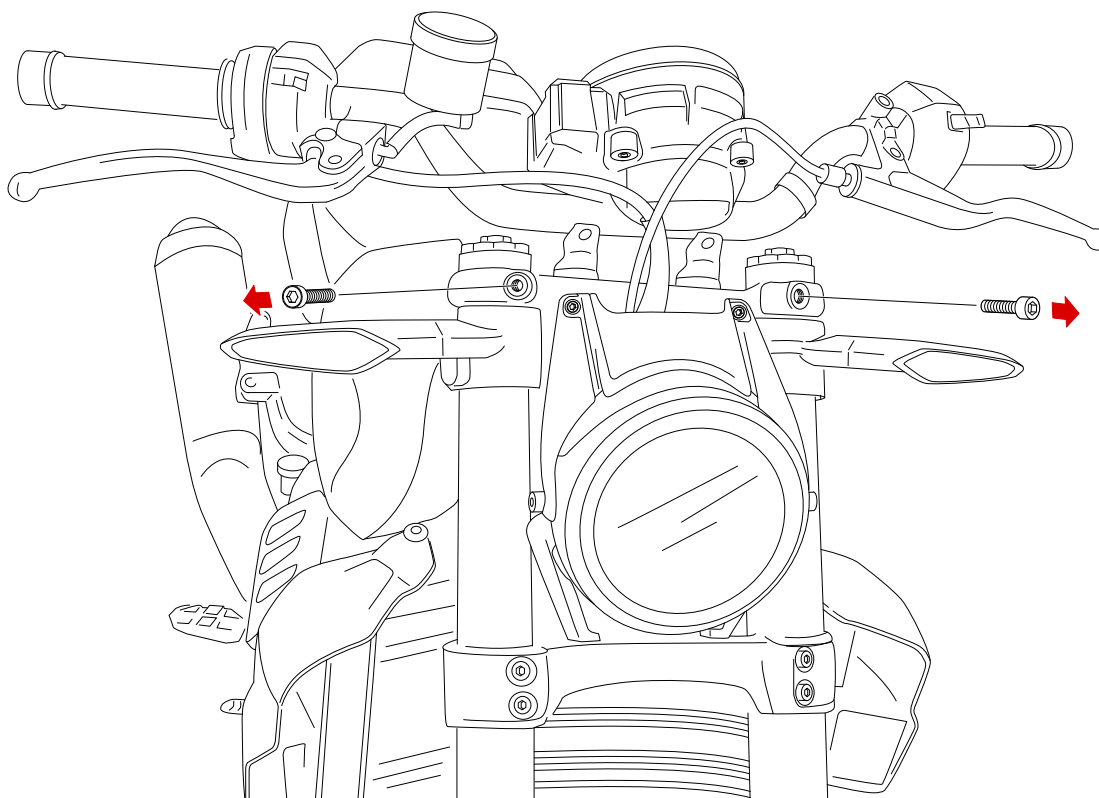


INDIAN FTR 1200 / S '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


6

ASSEMBLY
MONTAJE

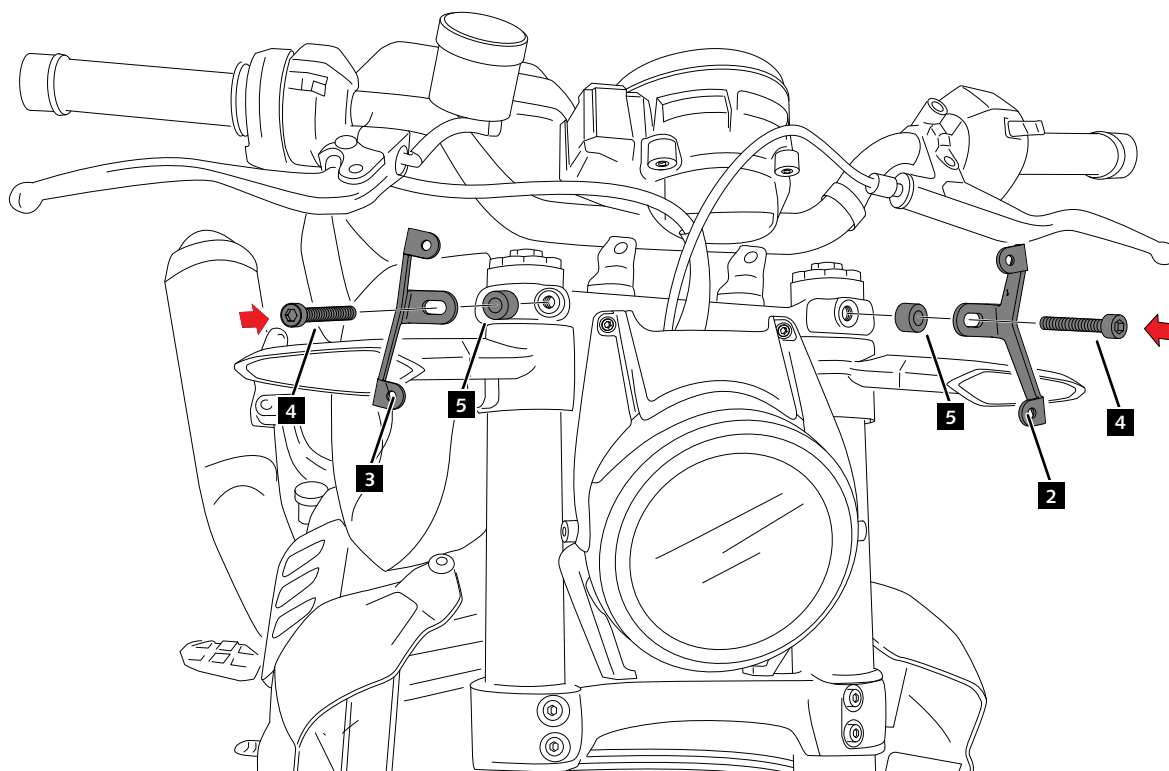

7

ASSEMBLY
MONTAJE

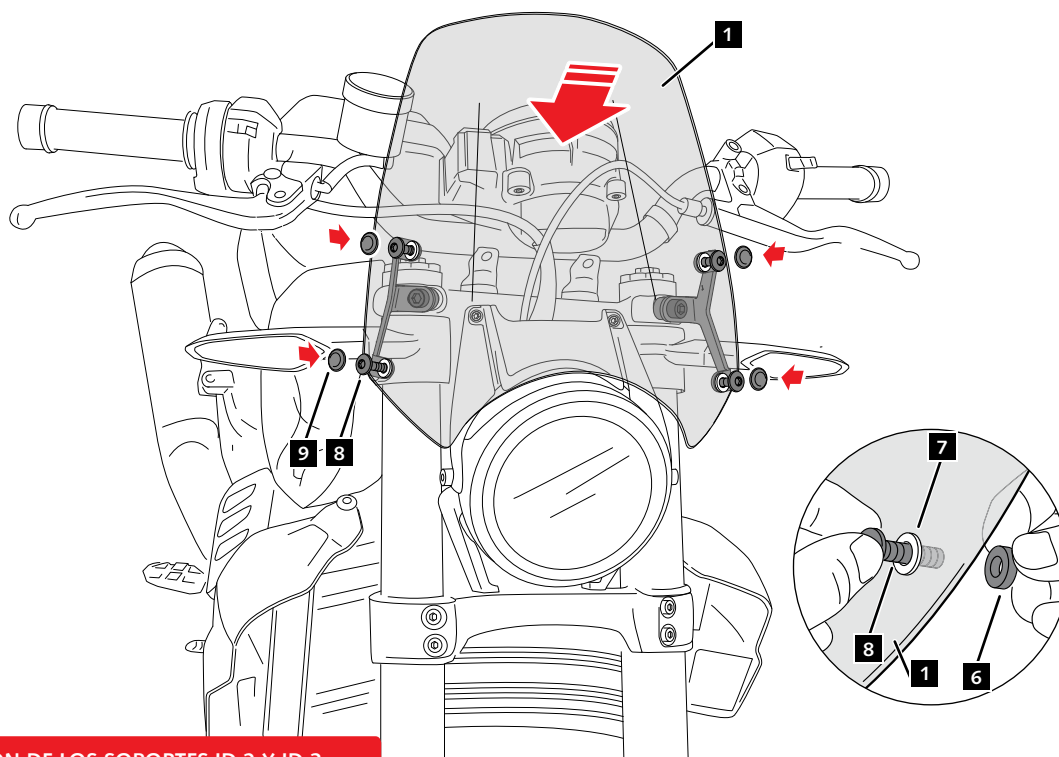

AJUSTAR LA POSICIÓN DE LOS SOPORTES ID.2 Y ID.3
ADJUST THE POSITION OF THE ID.2 AND ID.3 SUPPORTS