

HONDA CB1000 HORNET '25-

M O U N T I N G I N S T R U C T I O N S

REF 22384

D12 SPOILERS




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Alerón Izquierdo	Left spoiler	1	22384J/N /CM3
2		Alerón Derecho	Right Spoiler	1	22384J/N /CM3
3		Soporte izquierdo (L)	Left support (L)	1	SOPOR2P3-L22384
4		Soporte derecho (R)	Right support (R)	1	SOPOR2P3-R22384
5		Tope de goma Ø11 x Ø5.5 x 7mm	Ø11 x Ø5.5 x 7mm bumper foot	2	TOPEGOMA--22384
6		Arandela de nylon Ø5,5 x Ø9,5 x 3,96 mm	Ø5,5 x Ø9,5 x 3,96 mm nylon washer	4	ARAND-----22384
7		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 allen screw	4	TORNI-I7380-730
8		Tornillo M5x12 DIN7991	M5x12 DIN7991 allen screw	4	TORNI-D7991-611
9		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	4	ARAND-EPDM--722
10		Tapón tornillo M5 DIN7991	M5 DIN7991 screw cap	4	TAPON-----92

HONDA CB1000 HORNET '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

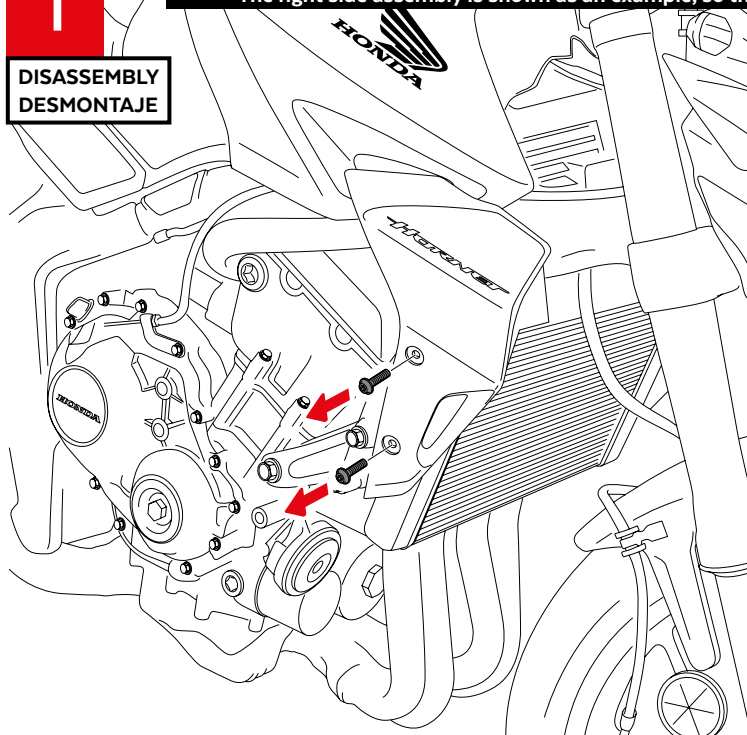


2

**ASSEMBLY
MONTAJE**

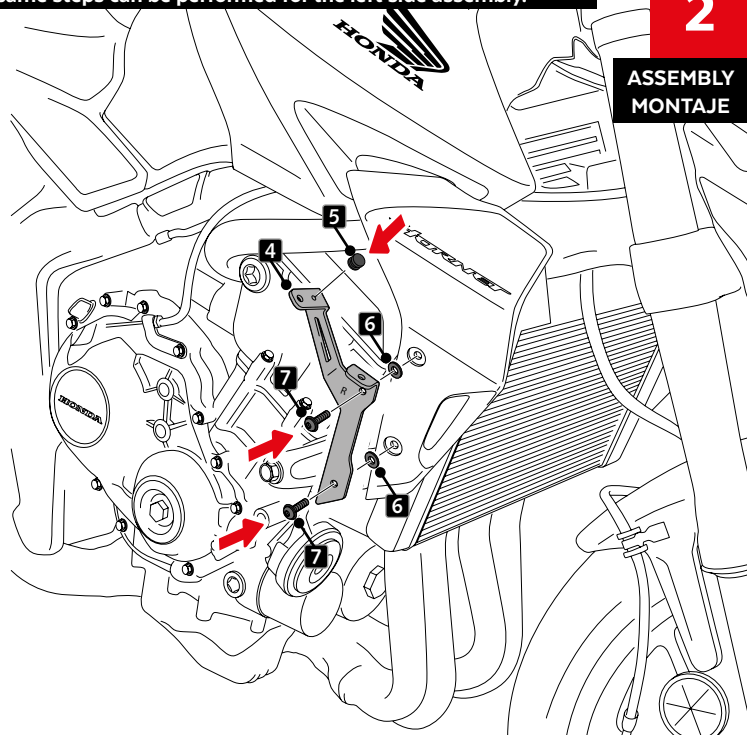

3

**ASSEMBLY
MONTAJE**

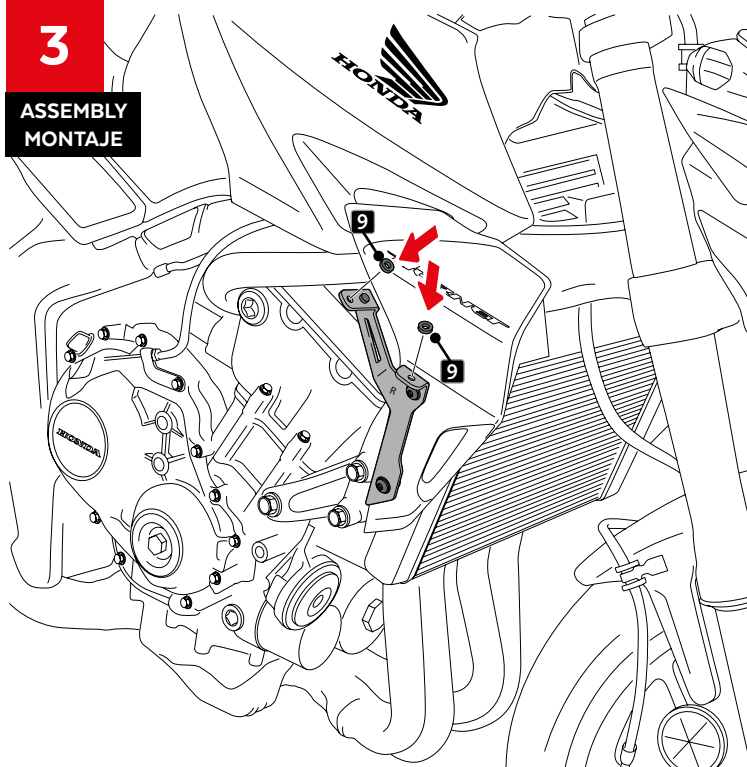

4

**ASSEMBLY
MONTAJE**

