

# DUCATI STREETFIGHTER V2 '25-

## M O U N T I N G I N S T R U C T I O N S

REF 22740

D12 SPOILERS



1 Person




20 min



EASY



ALLEN



N° 3  
N° 4

| ID. | PIEZA/PART | DESCRIPCIÓN                       | DESCRIPTION                    | QTY. | REF.:           |
|-----|------------|-----------------------------------|--------------------------------|------|-----------------|
| 1   |            | Alerón D12 izquierdo              | Left D12 Spoiler               | 1    | 22740J/N/CM3    |
| 2   |            | Alerón D12 derecho                | Right D12 Spoiler              | 1    | 22740J/N/CM3    |
| 3   |            | Soporte Izquierdo (L)             | Left support (L)               | 1    | SOPOR2P5-L22740 |
| 4   |            | Soporte derecho (R)               | Right support (R)              | 1    | SOPOR2P5-R22740 |
| 5   |            | Tornillo Allen M5x30 Ø11 ISO 7380 | M5x30 Ø11 ISO 7380 Allen screw | 2    | TORNI-I7380-767 |
| 6   |            | Casquillo Ø13x Ø8,5x 9mm          | Ø13x Ø8,5x 9mm Arrowhead       | 2    | CASQUI-----777  |
| 7   |            | Tornillo allen M5x20 Ø11 ISO 7380 | M5x20 Ø11 ISO 7380 Allen screw | 2    | TORNI-I7380-730 |
| 8   |            | Casquillo Ø 13x Ø 8x 3,5mm        | Ø 13x Ø 8x 3,5mm Arrowhead     | 2    | CASQUI-----775  |
| 9   |            | Tope de goma Ø11x Ø 5,5x 7mm      | Ø11x Ø 5,5x 7mm bumper foot    | 6    | TOPEGOMA--22384 |
| 10  |            | Tornillo Allen M5x16 DIN7991      | M5x16 DIN7991 Allen screw      | 4    | TORNI-D7991-867 |
| 11  |            | Arandela de goma Ø4,5 x Ø11 x 2mm | Ø4,5 x Ø11 x 2mm Rubber washer | 4    | ARAND-EPDM--722 |
| 12  |            | Tuerca grafilada M5               | M5 nut                         | 4    | TUERC-D6923-255 |
| 13  |            | Tapón tornillo M5 DIN7991         | M5 DIN7991 screw cap           | 4    | TAPON-----92    |


# DUCATI STREETFIGHTER V2 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


DISASSEMBLY  
DESMONTAJE

Se muestra el montaje del lado derecho a modo de ejemplo, realizar los mismos pasos para el montaje del lado izquierdo.  
The Right side assembly is shown as an example, so the same steps can be performed for the left side assembly.

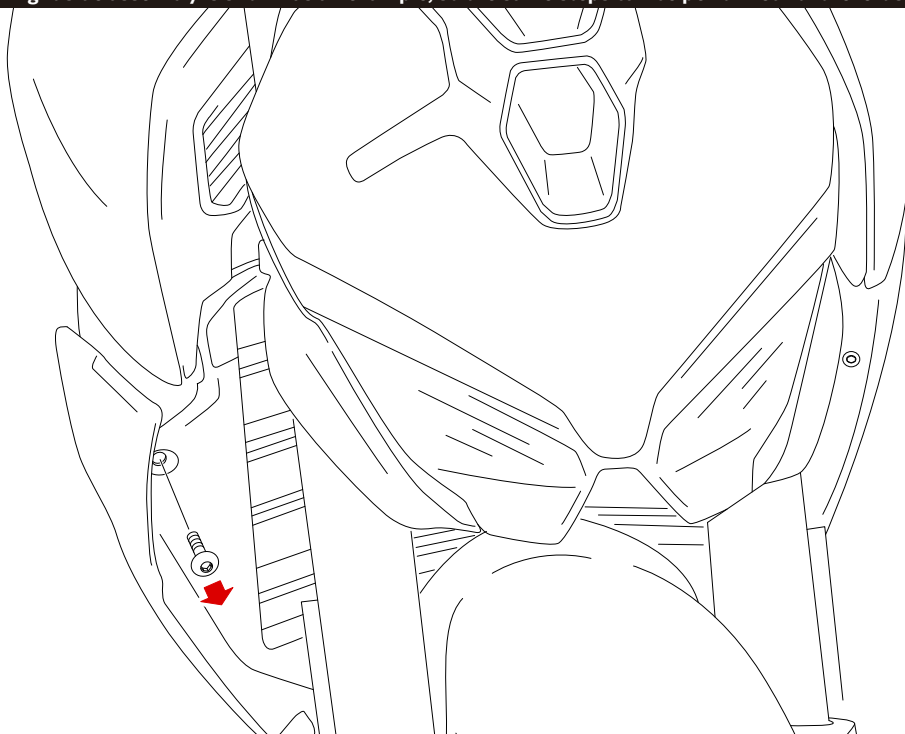

2

DISASSEMBLY  
DESMONTAJE

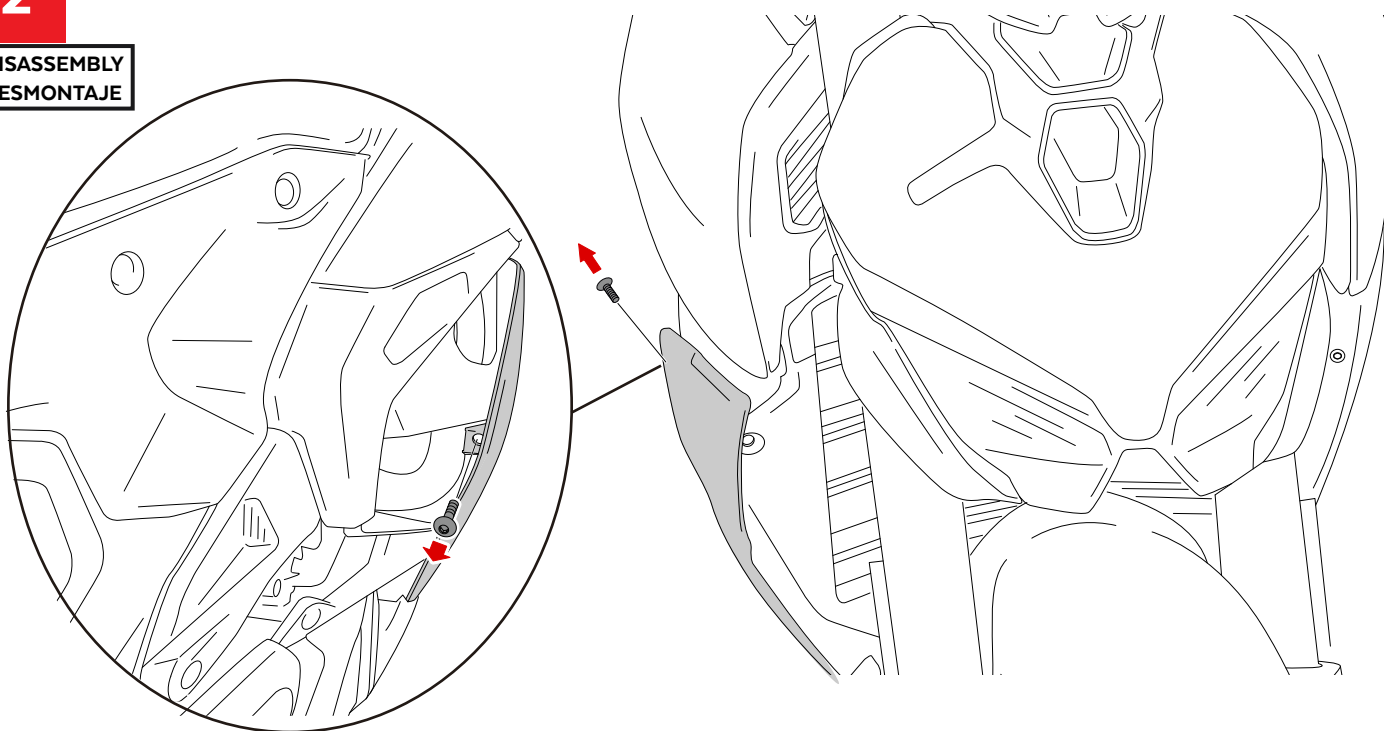


# DUCATI STREETFIGHTER V2 '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**3**

ASSEMBLY  
MONTAJE

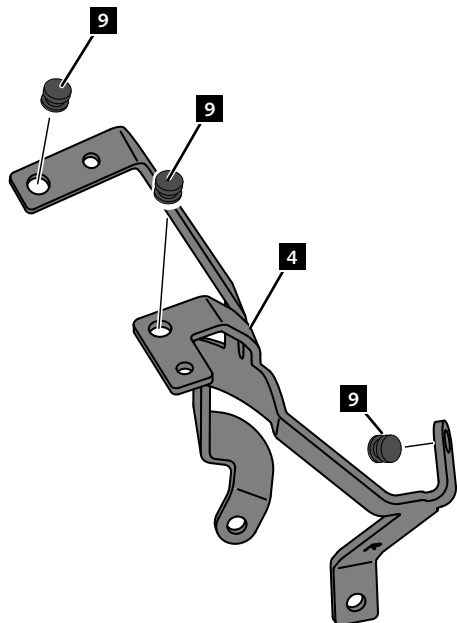

**4**


ASSEMBLY  
MONTAJE

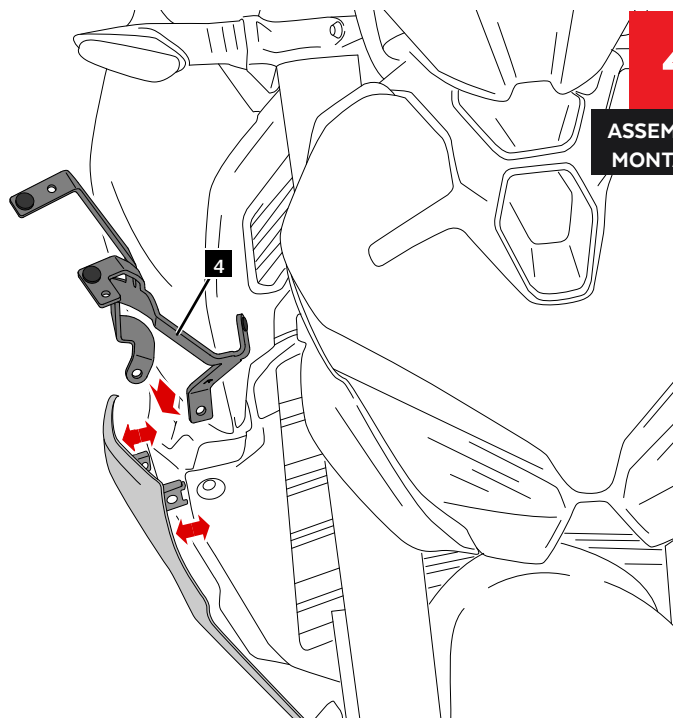

POSICIONAR SOPORTE ID2 DESPLAZANDO LA TAPA LATERAL ORIGINAL  
POSITION ID2 SUPPORT BY MOVING THE ORIGINAL SIDE COVER


**5**

ASSEMBLY  
MONTAJE

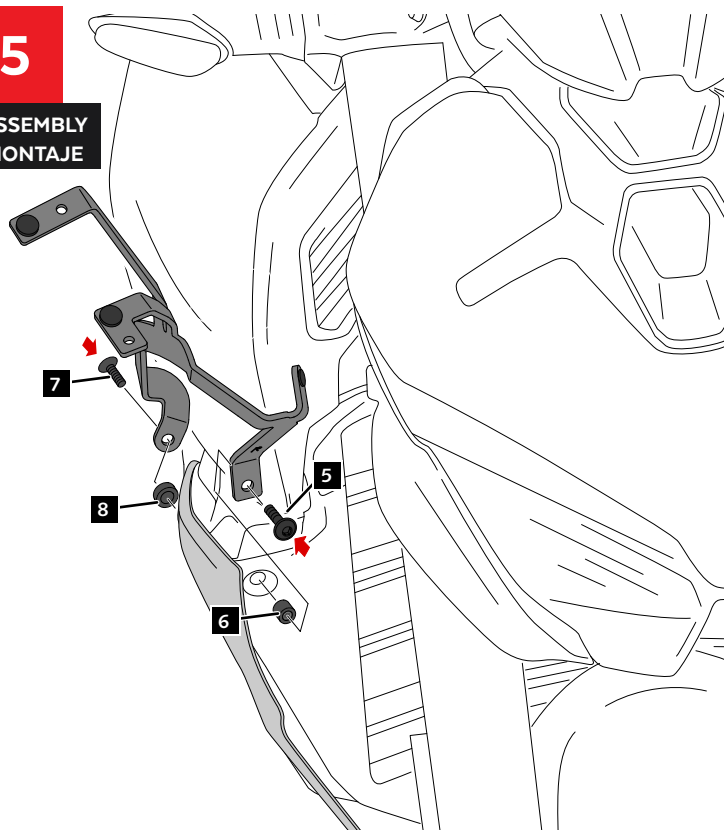

**6**

ASSEMBLY  
MONTAJE

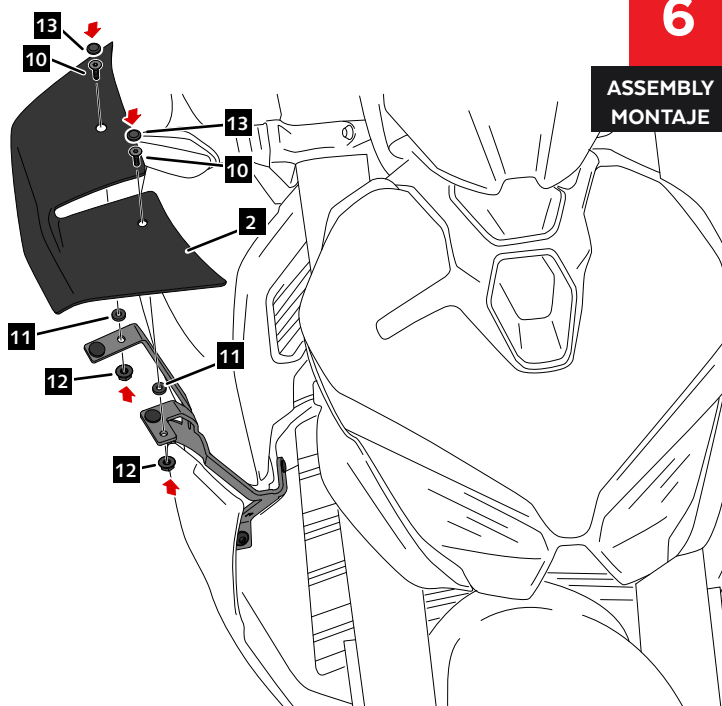

SI ES NECESARIO, AFLOJAR TUERCAS ID.12 Y AJUSTAR LA POSICIÓN DEL ALERÓN.  
IF IT'S NECESSARY, LOOSEN ID.12 NUTS AND ADJUST THE POSITION OF THE SPOILER