

# BMW S1000R / M1000R '25-

## M O U N T I N G I N S T R U C T I O N S

REF 22784

WINDSHIELD NG TOURING




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Touring	Touring screen	1	22784H/W/FM3
2		Soporte izquierdo ( L )	Left support ( L )	1	SOPOR2P2-L22784
3		Soporte derecho ( R )	Right support ( R )	1	SOPOR2P2-R22784
4		Casquillo Ø8,5xØ13x15mm	Ø8,5xØ13x15mm Arrowhead	2	CASQUI-M----614
5		Tornillo Allen M8x50 DIN912	M8x50 DIN912 Allen screw	2	TORNI-D912--532
6		Tope de goma Ø11xØ5,5x 7mm	Ø11xØ5,5x 7mm Bumper foot	4	TOPEGOMA--22384
7		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	4	AROPASACABLES-1
8		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
9		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	4	TAPON-----85

# BMW S1000R / M1000R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

PRE-ASSEMBLY  
PRE-MONTAJE

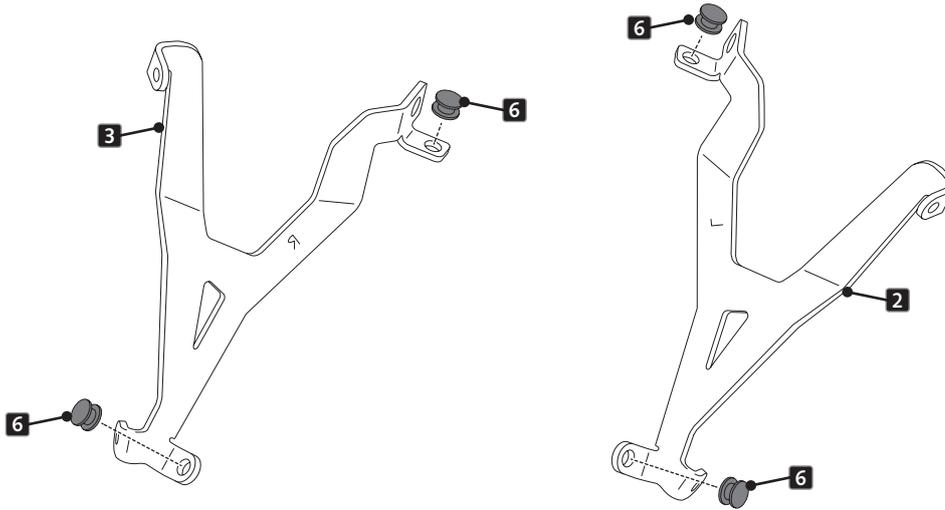


**2**

DISASSEMBLY  
DESMONTAJE

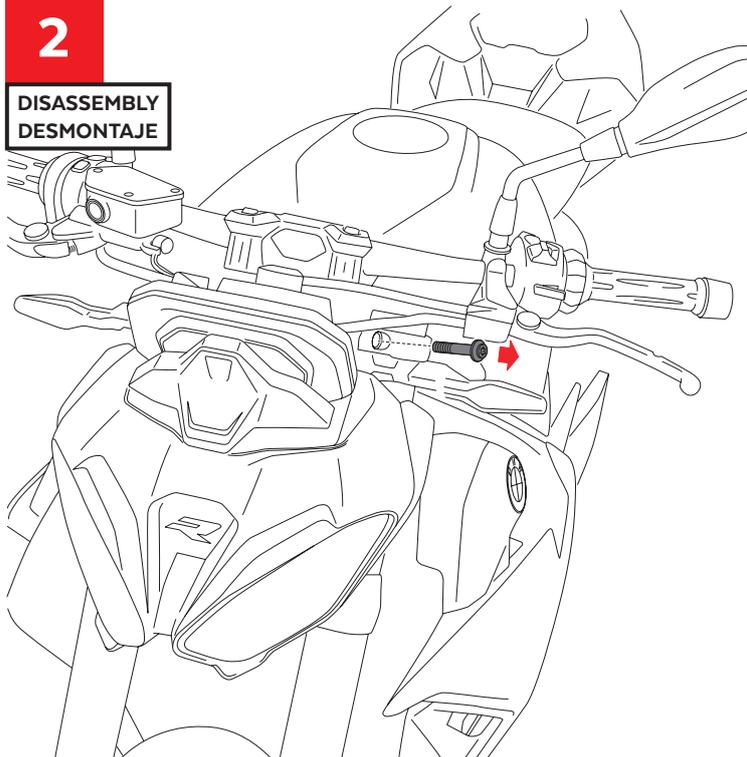

**3**

ASSEMBLY  
MONTAJE

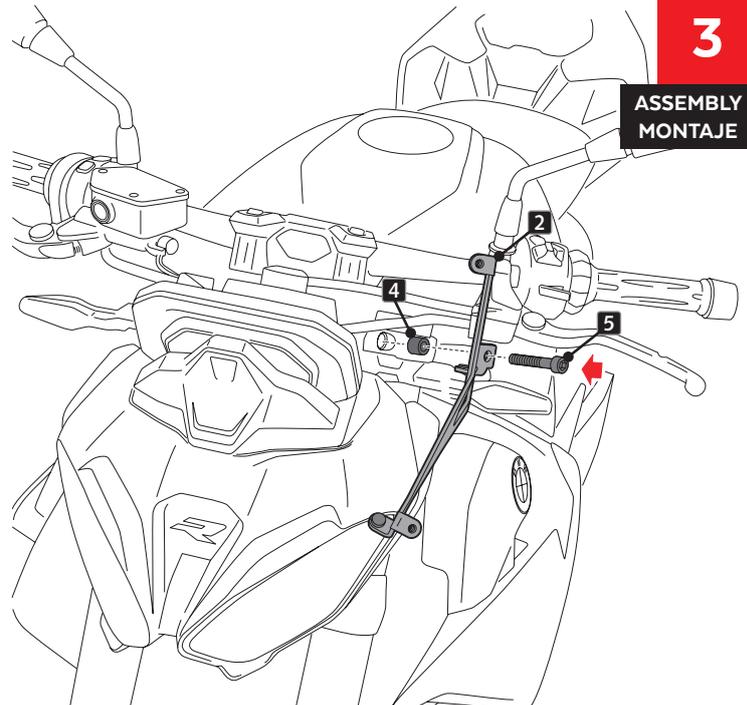


**5**  Par de apriete - consultar manual del fabricante  
Tightening torque - consult the manufacturer's manual

# BMW S1000R / M1000R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**4**

DISASSEMBLY  
DESMONTAJE

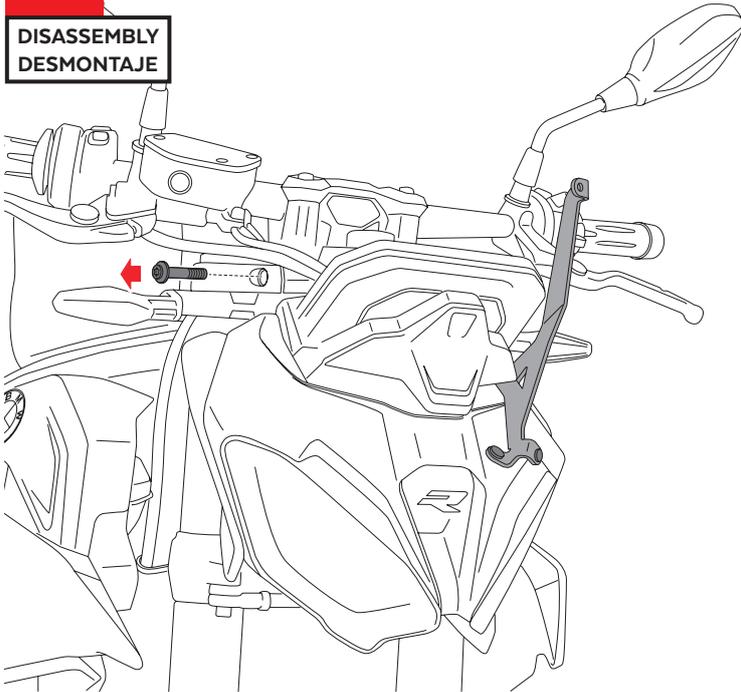

**5**


ASSEMBLY  
MONTAJE

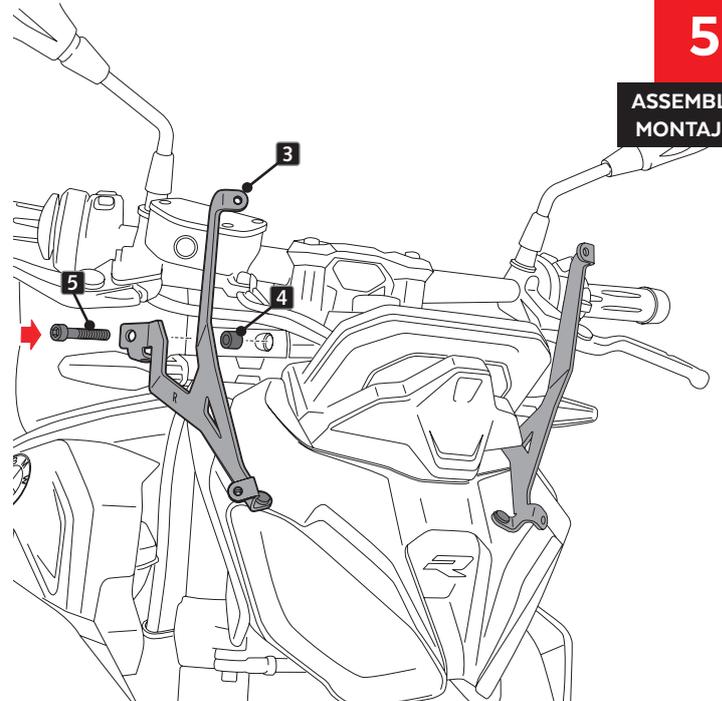

**5** Par de apriete - consultar manual del fabricante  
Tightening torque - consult the manufacturer's manual

**6**

ASSEMBLY  
MONTAJE

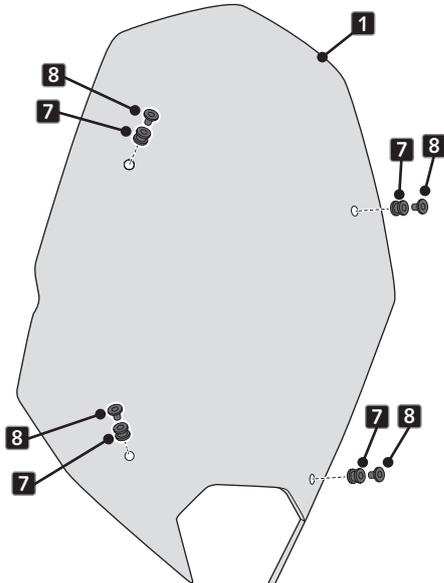

**7**

ASSEMBLY  
MONTAJE

