

# BMW R1300R '25-

## M O U N T I N G I N S T R U C T I O N S

REF 22821

**NAKED FRONTAL SPOILERS**





PHILLIPS  
SCREWDRIVER



TORX



T20


ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Alerón frontal naked	Naked frontal spoiler	1	22821J/N/CM3
2		Tornillo Ø4x20 DIN7505/B (Forma F)	Ø4x20 DIN7505/B Screw	2	TORNI-D7505-979
3		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	2	AROPASACABLES-1
4		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	2	CASQUI-1A---750

# BMW R1300R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

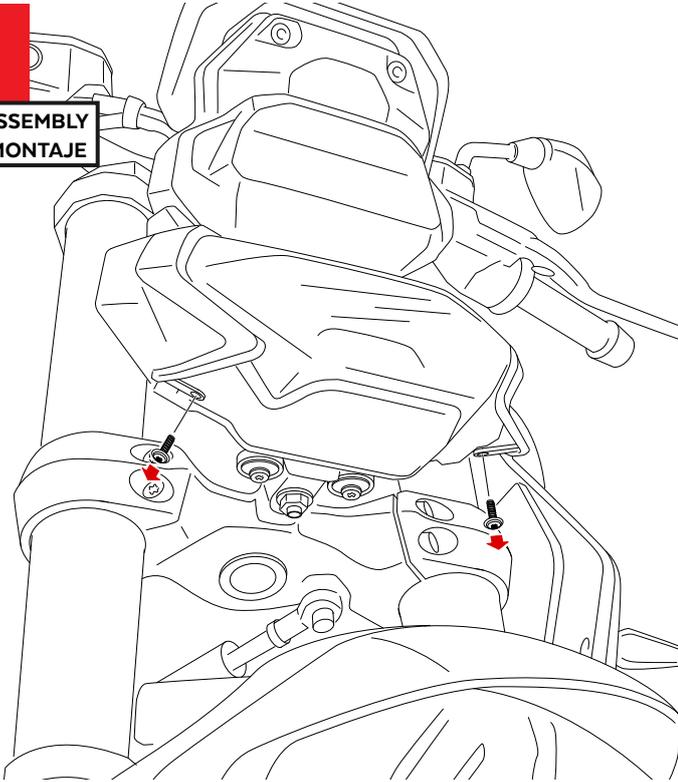

**2**

ASSEMBLY  
MONTAJE

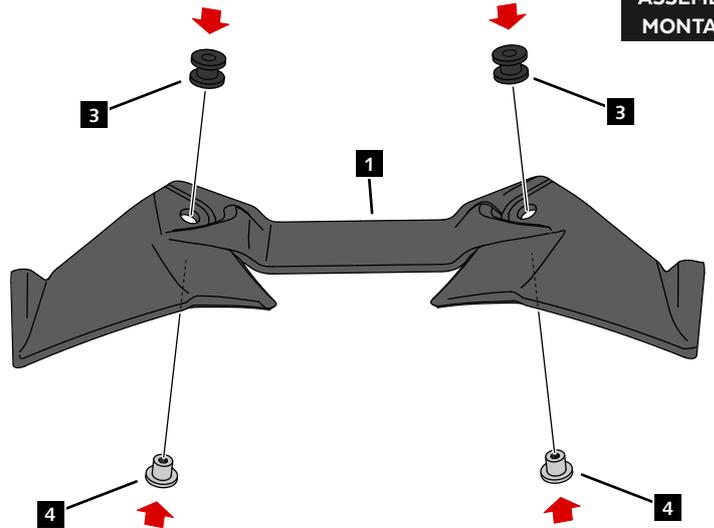

**3**

ASSEMBLY  
MONTAJE

